

How to remove the solvent tank, ITM02 maintenance kit and level sensor for the Domino A320 inkjet printer?

Let's open the lid below, and we'll first pull out the solvent box:



Then we unplug ITM02:



The level sensor has card slots, and we pull the slot up and the level sensor is removed:



Then we unplug the line inserted into the machine and the level sensor is completely removed:

