


## How to adjust the ink line of Hitachi PXR inkjet printer?

How do we adjust the ink wire to the left or right, we first need to loosen this screw:

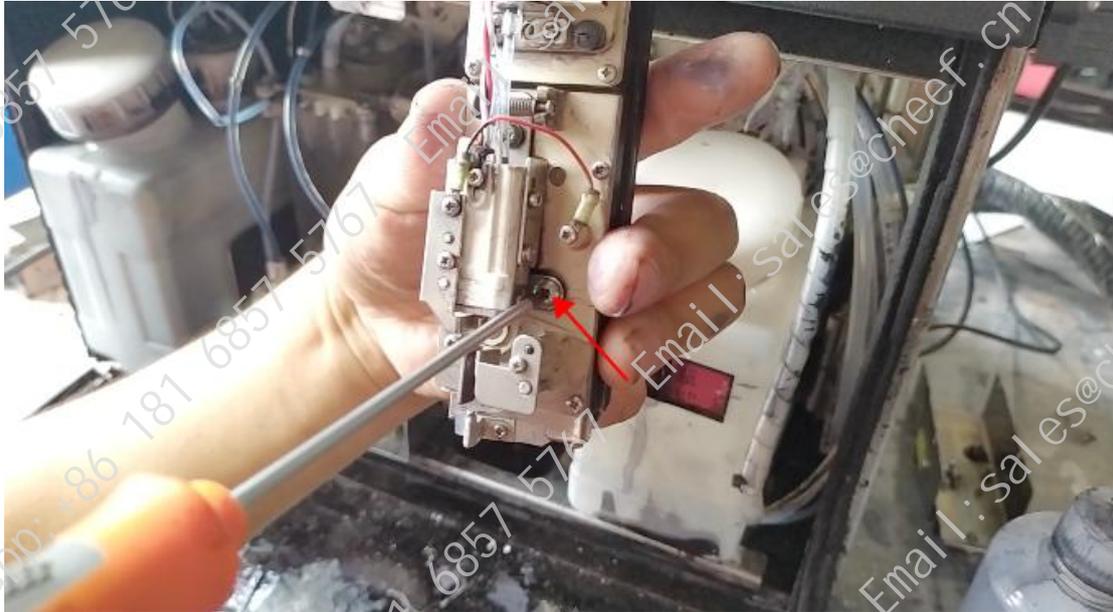


Then loosen the screw:




Then we adjust the screw:



When the left and right directions of the ink line are adjusted, then we fix the screw:

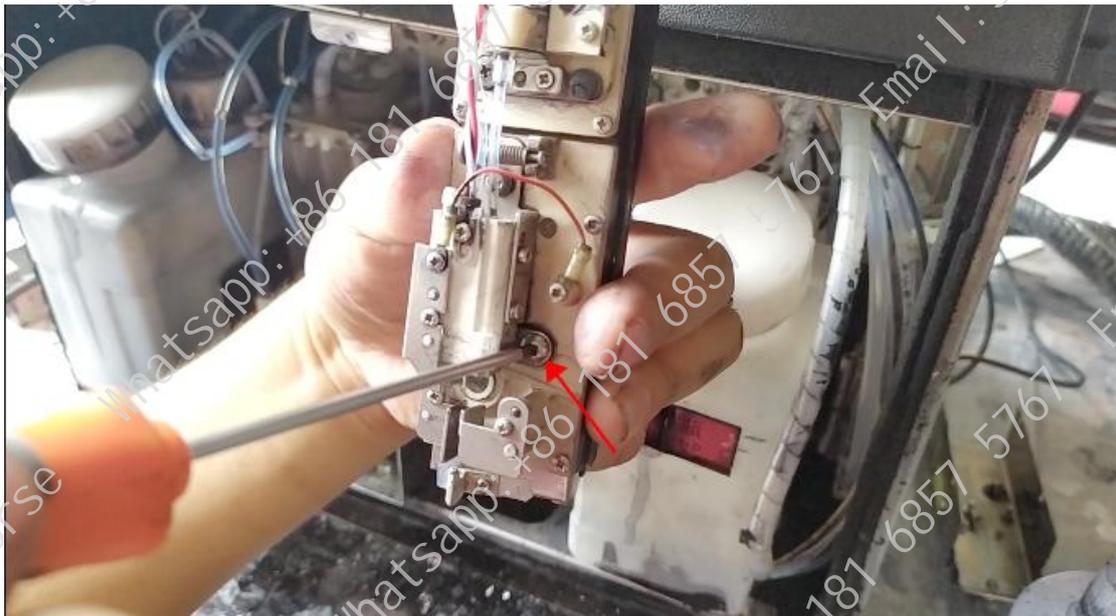


Then fix the screw:

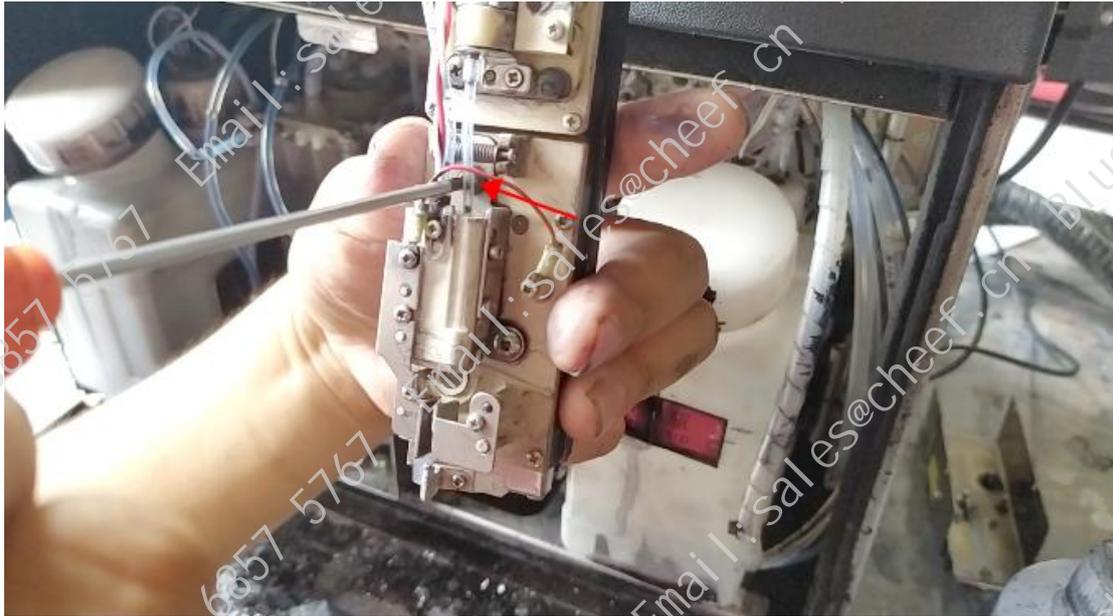


That's all right.

Then if you want to adjust the ink line up or down, we are loose this screw:

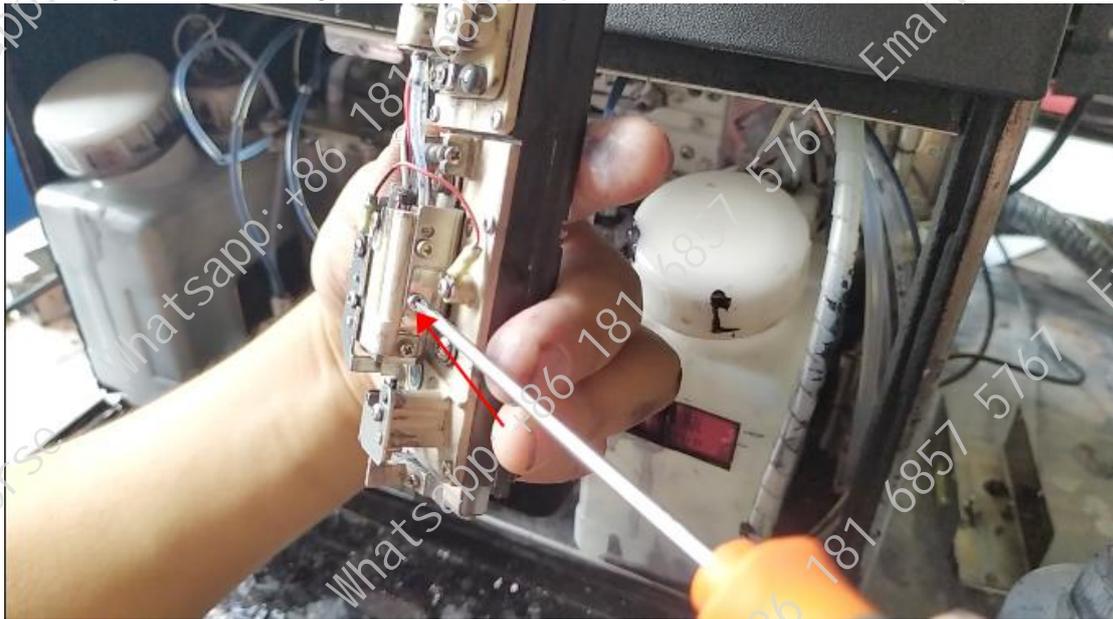

Then also loose this screw:

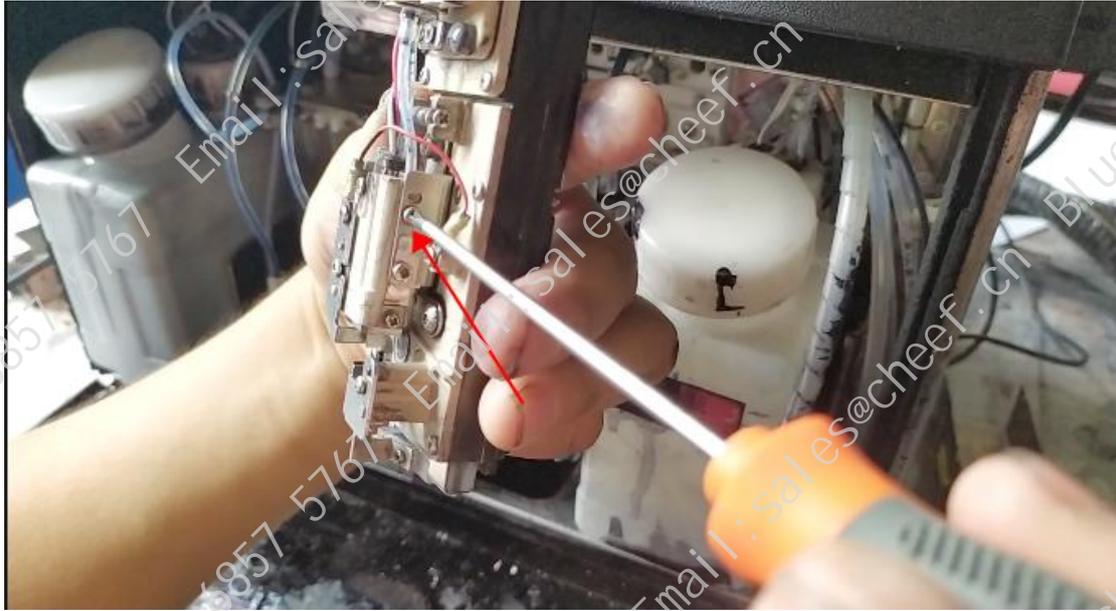

Then adjust the screw, clockwise or counterclockwise, and the ink wire is pressed inward or outward to adjust its front and back:

