


Part Number	ENM10041170
Image	Image x60
Notes	

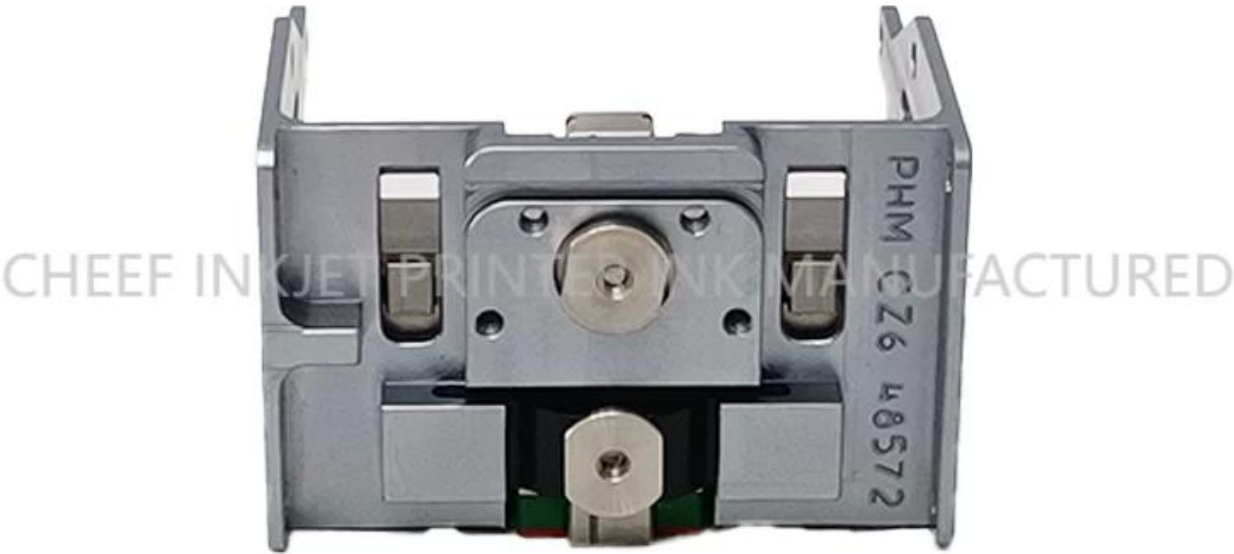

1. Part to be replaced

To replace the inkjet printer head, first, turn off the printer and unplug the power cord. Then, open the front cover and locate the inkjet printer head. Use a screwdriver to remove the screws holding the head in place. Carefully lift the head out of the printer and replace it with the new one. Finally, close the front cover and plug the power cord back in.

2. Part to be replaced

Part

32

53

107

300DPI 600DPI

3.

tto 300.000 600.000

-

-

-

-

4. TTO

tto

-

-

-

-

-

-

5. tto

1.

2

3.

4.

5.

