


## How to replace the charging slot and high-voltage deflector of the Domino white ink machine?

Replacing the charging bay and the high-voltage deflector plate is our most common accessory replacement.

If we want to replace it, first we have to loosen these four screws, we just take this lid off:



Let's see, first of all, if we want to replace the charging slot, I'll first turn the screw in front of it to loosen it:

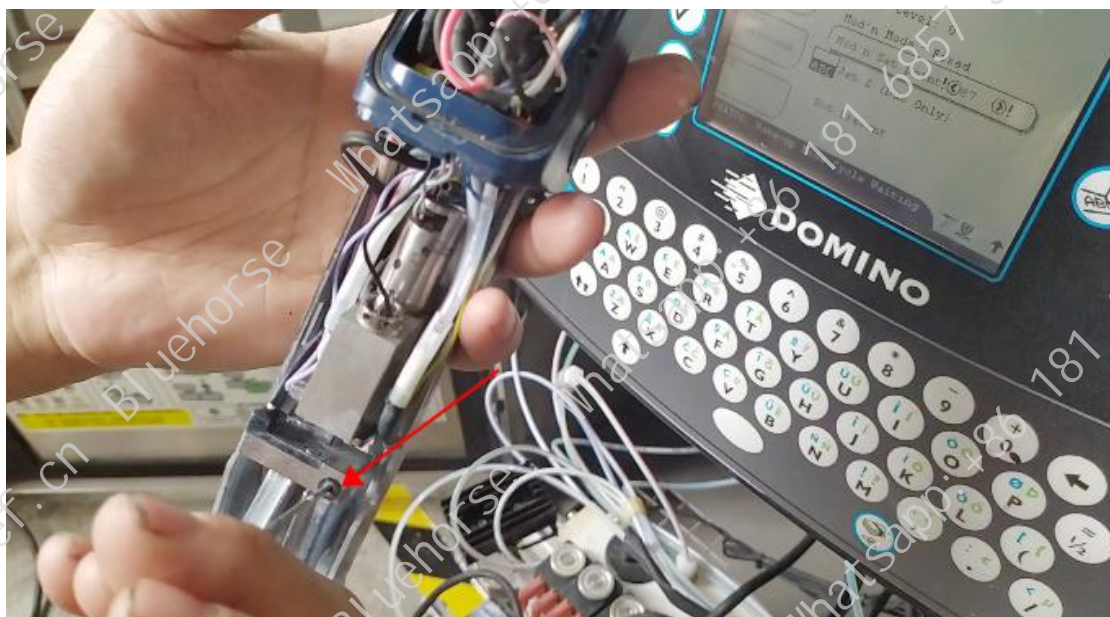

Then pull it out, be sure to loosen it in place or you can't pull it out:




After pulling it out, and then we take a look, we find two lines of it. One is this line:






There's another line that's this:

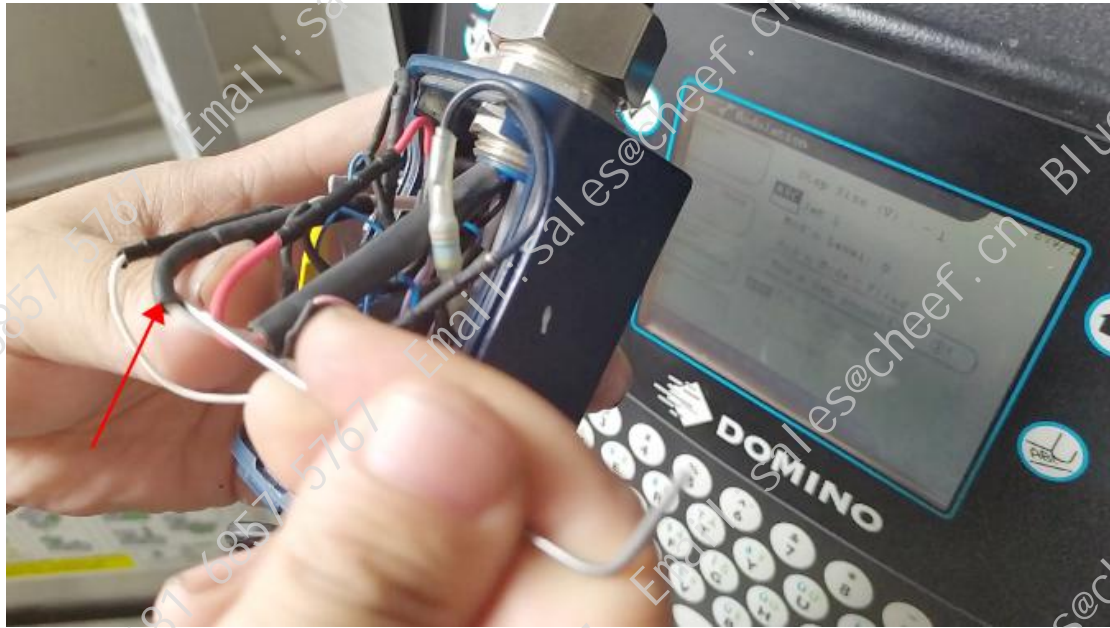


These are the two wires of the charging slot, one thin and one thick and white:

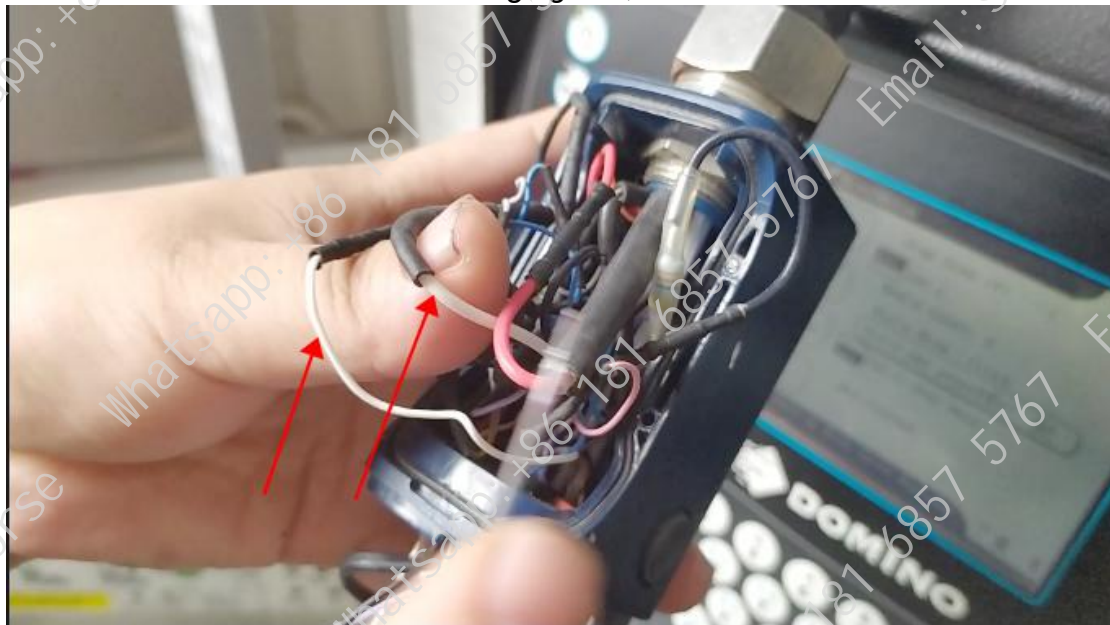

Let's cut off this black hot lock tube with a knife, and then this plug can be unplugged:




First pass it through the hole, after it passes:

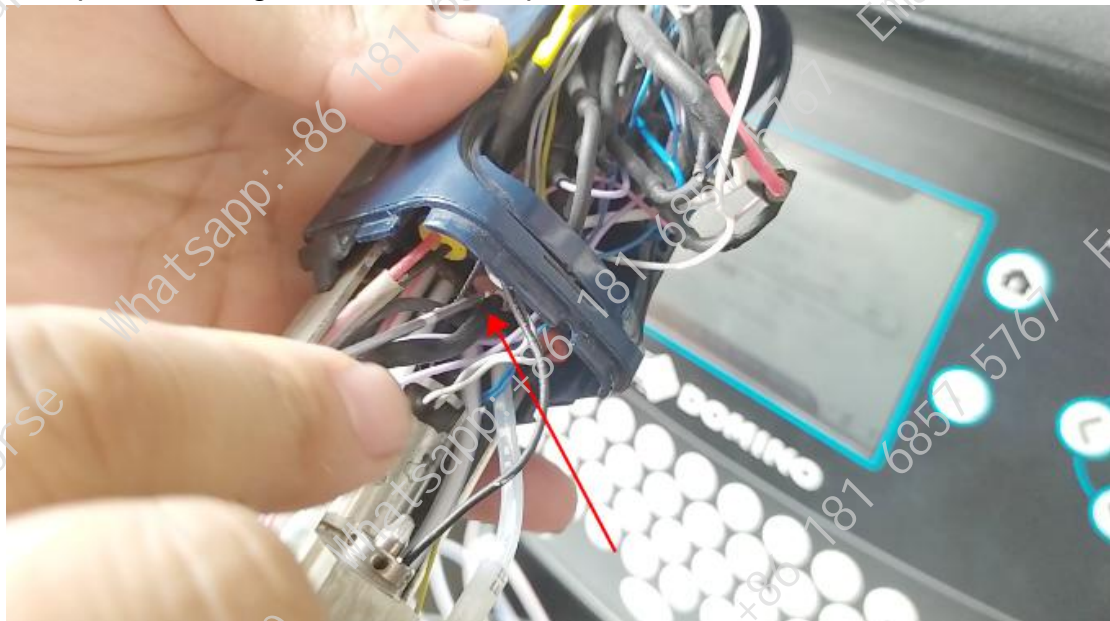



Then we can install the charging tank and tighten the screw:

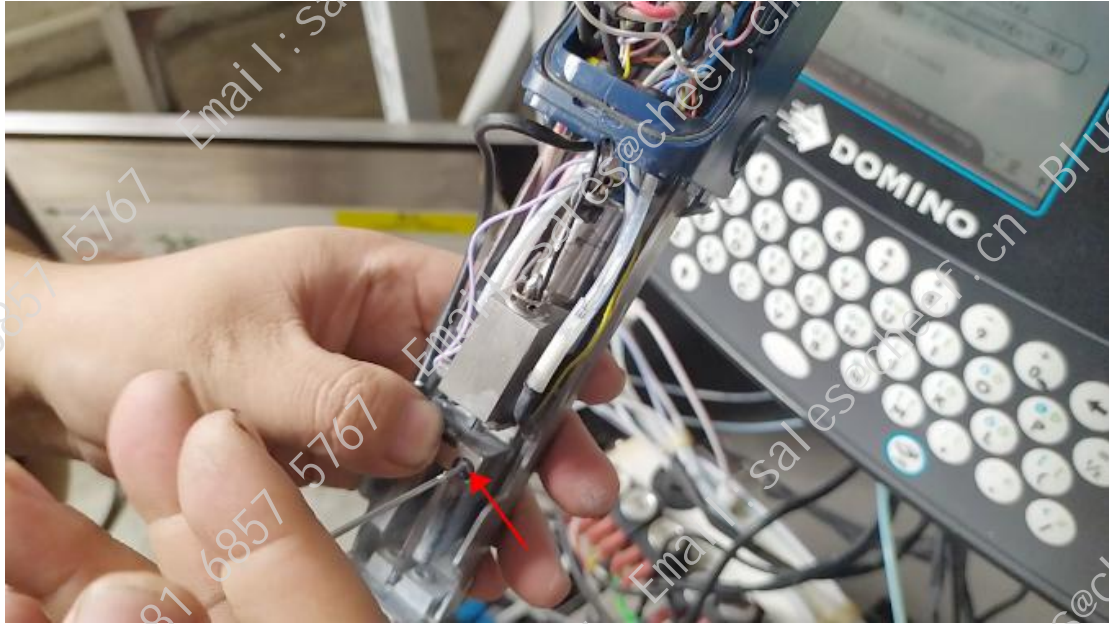

Then install the two wires and lock them with a hot lock:




The charging slot has been replaced.

There is also the replacement of the high-voltage deflector board, the replacement of the high-voltage deflector plate is also the first to pull out the charging tank:



There are four screws on this side, be sure to remove them:

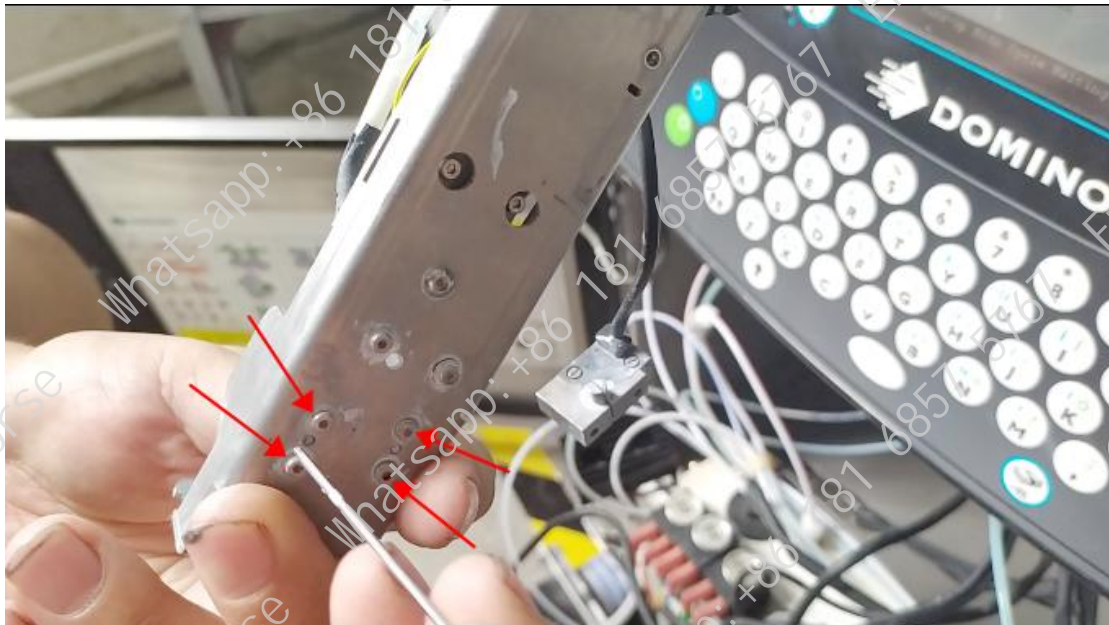



Remember, the black line control board is on the right:




The red line control plate is on the left and should not be installed in reverse:



After we take it off, we comb the line:




Then find the two lines that belong to it here:

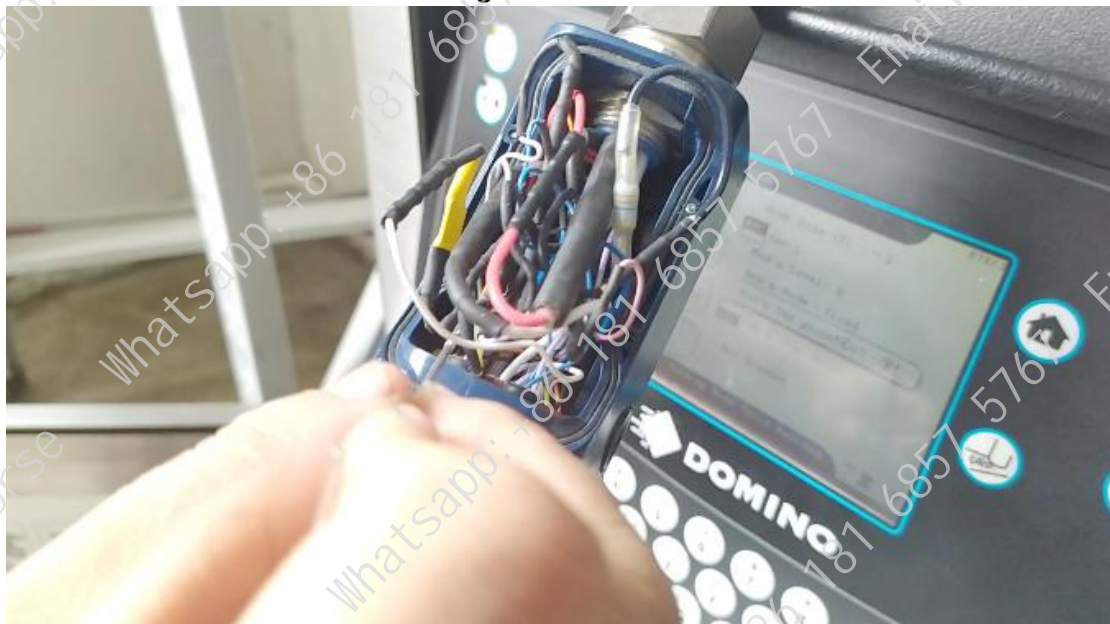

The same is true of its two wires, cutting off the hot lock tube and then pulling it out, and then the high-pressure deflector can be pulled out.



After pulling it out, and then changing it, let's cross the line from here:

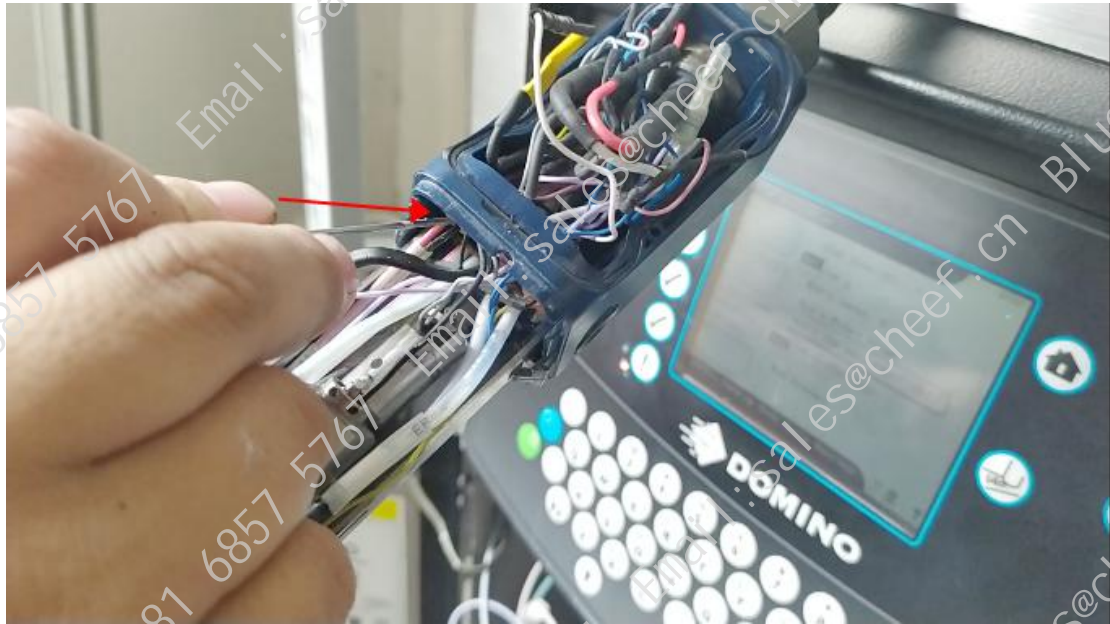


Then we install the board on this side:




After installation, the black line control of the board is on the right, the red line control of the board is on the left.

Then we install the screws:

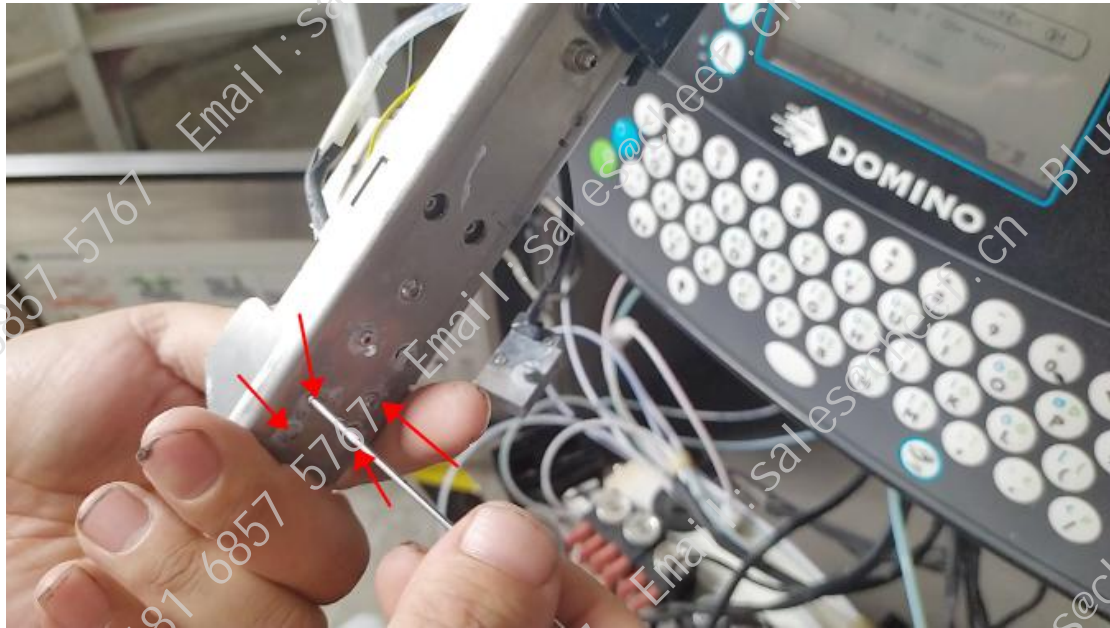


Then we plug in the above lines, and then lock the above lines with a hot lock tube:

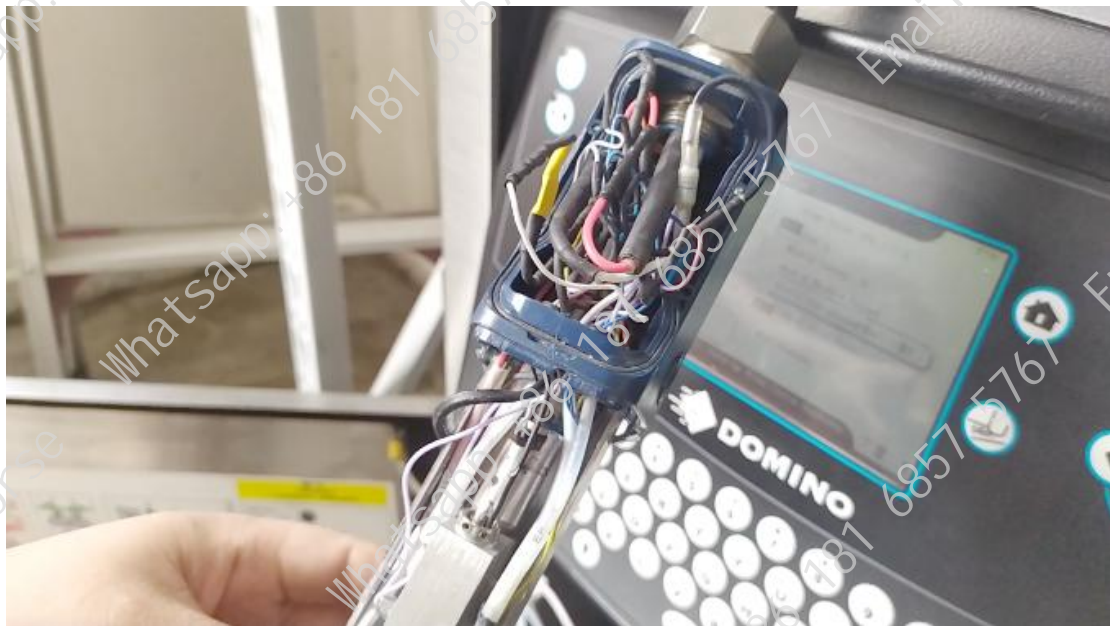



Then we install the charging slot:

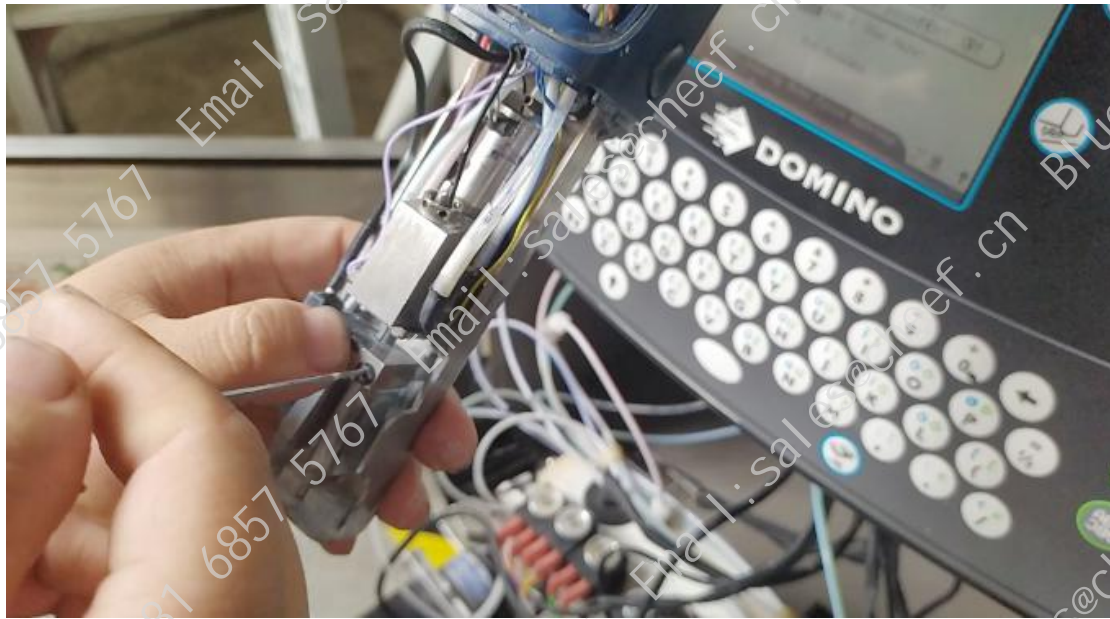

Then the high-voltage deflector plate is replaced.

Then replace them all, and then we'll cover it.